

INSTALLATION

# RETRO POOL PLUG KIT

**Vivid360**

POOL & SPA REPLACEMENT LIGHTS


# Okay, Let's Get Started

## Tools For Install

- #1 Phillips head screwdriver
- Wire strippers

## Optional Tools

- 20mm wrench
- 25mm wrench

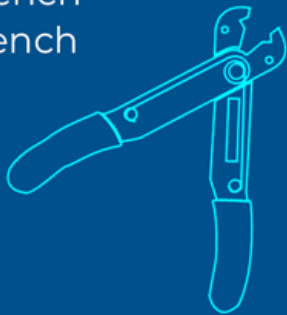

# Check Existing Cable

1

Visually inspect the existing cable to determine its viability.

***The existing cable is not viable if:***

- There are cuts or tears in the outer jacket
- Corrosion of the copper wire
- Signs of water intrusion

2

Testing the cable's resistance is a good way to ensure that the existing cable is viable.

*Refer to Cable Resistance Technical bulletin for instructions and guidelines on resistance testing or go to [bluesquaremfg.com/technical-documents](https://bluesquaremfg.com/technical-documents)*

# INSTALLATION

When it is determined that the existing cable is viable for a plug kit installation proceed with the following steps:

- 1** Strip off ½” of the cable’s outer jacket.
- 2** Strip off ¼” of the wire installation.
- 3** Slide the nut clamp onto the cable.\*
- 4** Slide the thrust washer onto the cable with the small side of the cone towards the Nut Clamp. Two washers are included use the smallest that fits.\*
- 5** Three seals are provided in the kit to provide the best protection from water intrusion. The seal should fit snugly, not loose, over the cable. Slide the seal that best fits your cable on approximately 4” down the cable.\*

\*See size chart for the diameter range for Seal, Nut Clamp, Thrust Washer, Flat Washer, Cable Nut


1



2




3

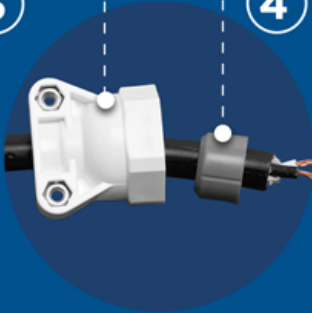

4



5

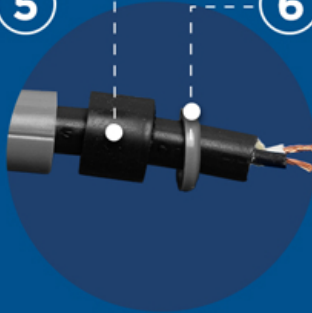

6



- 6 Slide the small washer onto the cable.\*
- 7 **Pool Light:** Slide cable bracket for pool light.  
**Spa Light:** Slide connector nut for spa light.
- 8 Slide connector housing onto cable.
- 9 Thoroughly twist the copper wires together and insert them into the terminals on the plug. Tighten the terminal screws and give the cable a tug to ensure the wires are secure in the terminals.
- 10 Push the plug into the connector housing and be sure the key on the plug is aligned with the keyway in the connector housing.
- 11 While firmly holding the plug in the connector housing, push the small washer, seal and thrust washer into the connector housing. Silicone or teflon lubricant can be used to assist in entering the connector housing. Do not use petroleum based lubricants.\*

\*See size chart for the diameter range for Seal, Nut Clamp, Thrust Washer, Flat Washer, Cable Nut

7



Pool Light

7



Spa Light

8



9



- 12 Screw the nut clamp down onto the connector housing. 20mm and 25mm wrenches can be helpful in screwing the nut clamp on all the way. Be aware that the plug will want to push out the end of the connector housing when tightening down the nut clamp. Hold the plug in place securely while tightening down the nut clamp. If properly fitted, there should be no more than 2 threads exposed on the connector housing.
- 13 Screw down the cable clamp onto the nut clamp. Cable is now ready to be installed onto the lamp.
- 14 Grab light & align the Plug Kit with the exposed metal connector pins at the rear of the new light, and push into place.  
**Pool Light:** Ensuring the clips on the Cable Bracket engage properly.  
*(Use a #1 Phillips screwdriver and 3 x Stainless Steel screws)*  
**Spa Light:** Hand tighten the connector nut.

## Questions?

Check out our video:

[bluesquaremfg.com/technical-documents](https://bluesquaremfg.com/technical-documents)



10



11



12

13

14



Pool Light

14



Spa Light



# CAUTION

**DISCONNECT POWER SUPPLIES  
BEFORE SERVICING**

*Confirm that power has been turned off to the existing underwater light that is being replaced.*

*If you cannot be sure that power has been disconnected, then **DO NOT CONTINUE WITH THE INSTALLATION.***



Toll Free: 800.277.4150  
[BlueSquaremfg.com](http://BlueSquaremfg.com)

## SIZE CHART

Cable Gauge (as per tool)	Cable Diameter	Seal Color/Size	Thrust Washer	Flat Washer	Nut Clamp	Cable Nut Color/Size
A	0.32" ~ 0.37" (8.2mm ~ 9.4mm)	Black L	XL	XL	XL	White XL
B	0.37" ~ 0.42" (9.5mm ~ 10.6mm)	Gray XL	XL	XL	XL	Gray XXL
C	0.42" ~ 0.46" (10.7mm ~ 11.8mm)	Orange XXL	XXL	XXL	XXL	Gray XXL